

Owner's Guide

CAUTION: Do NOT

1. connect any solar panel to the inverter; use only 12V batteries as input
2. connect the inverter's output into a household grid/wiring

DO:

1. Use a fuse in your circuit to protect the inverter and your equipments

DC TO AC

Power Inverter

CONTENTS

Safety First	1
1. Introduction	7
2. Installation Guidelines	9
3. Using the inverter	15
4. Troubleshooting	27
5. Specifications	33

Specifications	6
Introduction	9
Installation Guidelines	12
Troubleshooting	12
Using the inverter	18

SP=Surge Power

THD=Total Harmonic Distortion

NL=No Load Current Draw

Specifications subject to change without notice

Type	CP	SP	Efficiency	THD	NL	Dimension (LxWxH)	Weight
CZ-1000S	1000W	2000W	>85%	≡ 5%	<0.6A	470*270*11 mm	5 kg
CZ-1500S	1500W	2000W	>85%	≡ 5%	<0.8A	390*310*109 mm	6 kg
CZ-2000S	2000W	3000W	>85%	≡ 5%	<0.8A	390*310*109 mm	6 kg
CZ-2500S	2000W	3000W	>85%	≡ 5%	<0.9A	390*310*109 mm	7kg
CZ-3000S	3000W	6000W	>85%	≡ 5%	<1.0A	390*310*109 mm	7.5 kg

CP=Continuous Power

Safety First...

- 36 -

Incorrect installation or misuse of the inverter may result in danger to the user or hazardous conditions. We urge you to pay special attention to all CAUTION and WARNING statements. CAUTION statements identify conditions or practices that may result in damage to other

equipment. WARNING statements identify conditions that may result in personal injury or loss of life.



WARNING! Shock hazard. Keep away from children.

- The inverter generates the same potentially lethal AC power as a normal household wall outlet. Treat it with the same respect that you would any AC outlet.
- Do not insert foreign objects into the inverter's AC outlets, fan or vent openings.
- Do not expose the inverter to water, rain, snow or spray.

- Do not, under any circumstances, connect the inverter to utility power AC distribution wiring.



WARNING! Heated surface.

The inverter's housing may become uncomfortably warm, reaching 140°F (60°C) under extended high power operation. Ensure at least 2 inches (5cm) of air space is

Type	CP	SP	Efficiency	THD	NL	Dimension (LxWxH) mm	Weight
CZ-75M	75W	150W	>91%	/	<0.1A	67*67*38 mm	0.25kg
CZ-100M	100W	200W	>90%	/	<0.2A	118*91*47 mm	0.5kg
CZ-150M	150W	300W	>90%	/	<0.25A	151*110*58 mm	0.6kg
CZ-200M	200W	400W	>90%	/	<0.3A	180*91*47 mm	0.8kg
CZ-300M	300W	600W	>90%	/	<0.3A	151*110*58 mm	0.6 kg
CZ-400M	400W	800W	>90%	/	<0.3A	151*110*58 mm	0.6 kg

CZ-500M	500W	1000 W	>85%	/	<0.4A	252*215*89 mm	2 kg
CZ-600M	600W	1200 W	>85%	/	<0.4A	252*215*89 mm	2 kg
CZ-800M	800W	1600 W	>85%	/	<0.4A	325*183*70 mm	3 kg
CZ-1000 M	1000 W	2000 W	>85%	/	<0.5A	470*270*11 mm	5 kg
CZ-300S	300W	600W	>90%	≅5%	<0.6A	235*406*57 mm	1 kg
CZ-500S	600W	1200 W	>85%	≅5%	<0.6A	252*215*89 mm	2 kg
CZ-800S	800W	1600 W	>85%	≅5%	<0.6A	325*183*70 mm	3 kg

Ambient operating temperature range:

- 35 -

32°F -104°F /0°C -40°C

Low battery alarm trigger range (nominal) :

10~10.4V/20~21V/40~42V

Low battery shut down range (nominal) :

9.7~10V/19.4~20V/29.1~30V

High battery shut down range (nominal):

15V/30V/60V

- 34 -

maintained on all sides of the inverter. During operation, keep away from materials that may be affected by high temperatures.



WARNING! Explosion hazard.

- Do not use the inverter in the presence of flammable fumes or gases, such as in the bilge of

a gasoline powered boat, or near propane tanks. Do not use the inverter in an enclosure containing automotive-type, lead-acid batteries. These batteries, unlike sealed batteries, vent explosive hydrogen gas, which can be ignited by sparks from electrical connections.

- When working on electrical equipment

- 3 -

always ensure someone is nearby to help you in an emergency.



CAUTION!

- Do not connect live AC power to the inverter's AC outlets. The inverter will be damaged even if it is switched OFF.

- Do not connect any AC load, which has its neutral conductor connected to ground, to the inverter.
- Do not expose the inverter to temperatures exceeding 104°F (40°C).

5 Specification - 4 -

AC output voltage (nominal):

110V/230VAC

DC input voltage range:

10~15VDC/20~30VDC/40~60VDC

pure sine wave

AC output frequency:

50 ± 2Hz/60 ± 2Hz

AC output waveform:

modified sine wave /

Possible Cause

AC product (s) connected are rated at more than the rated continuous output power: overload shutdown has occurred.

AC product is rated less than rated continuous output power: high starting surge has caused overload shutdown.

Battery is discharged (alarm is sounding). Inverter has overheated due to poor ventilation and has caused over temperature shutdown.

Suggested Remedy

Use product with a power rating less than the rated continuous output power. Product exceeds inverter's surge capability. Use a product with starting surge power within the inverter's capability. Recharge battery. Switch inverter OFF and allow to cool for 15 minutes. Clear blocked fan or remove objects covering unit. Locate unit to a cooler environment. Reduce load if continuous operation is required. Restart. Verify charging system is properly regulated and battery is 12V/24V/48V DC nominal.

PROBLEM: AC ⁻³³⁻ luct will not operate, red FAULT light ON.



CAUTION! Do not use inverter with the following equipment.

- Small battery operated products such as rechargeable flashlights, some rechargeable shavers, and night-lights that are plugged directly into an AC receptacle to recharge.

- Certain battery chargers for battery packs used in hand powered tools. These chargers will have warning labels stating that dangerous voltages are present at the charger's battery terminals.
- Connect inverter only to batteries with a 12V/24V/48V DC nominal output. A battery with 6V/12v/24v nominal output will not

supply enough $v - 5 -$ and a battery with 24V/48V/96V nominal output will DAMAGE THE INVERTER.

PROBLEM: Battery - 6 - me is less than expected.

Possible Cause

AC product power consumption is higher than rated.
Battery is old or defective.

Battery is not being properly charged.

Power dissipation in DC cables.

Suggested Remedy

Use a larger battery to make up for increased power requirement.

Replace battery.

Many simple charges are unable to charge a battery fully. Replace charger with better model such as a TRUECHARGE smart charger.

Use shorter/heavier DC cables.

Suggested Remedy

Shorten cables or use heavier cables.

Recharge battery. Allow unit to cool.

Improve air circulation around unit.

Locate unit to cooler environment.

Reduce load if continuous operation is required.

Possible Cause

Low voltage shut down or thermal shutdown has occurred.

1 Introduction

Thank you for purchasing the power inverter.

The inverter is a compact and highly portable power inverter, the leader in the field of high

frequency inverter design. From the 12V/24V/48V DC outlet in your vehicle or boat, or directly from a dedicated 12V/24V/48V DC battery, the inverter will efficiently and reliably power a wide variety of household AC products, such as TVs, computers, VCRs, and includes automatic safety monitoring circuitry to protect the inverter, and your battery, from inadvertent overload conditions.

Read this guide before stalling or using the inverter and save it for future reference.

Safety Features

These advanced safety features are built into the inverter:

- Electronic overload protection with automatic shutdown.
- Built-in internal backup DC fuse provides added safety.
- Low battery voltage protection with automatic shutdown.
- Over temperature protection with automatic

PROBLEM: Measured inverter output is too low.

PROBLEM: Alarm is sounding.

Standard “average-reading” AC voltmeter used to measure output voltage, resulting in an apparent reading 5 to 15 volts too low.

Battery voltage is too low.

Suggested Remedy

Inverter’s “modified sine wave /pure sine wave” output requires “true RMS” voltmeter, such as Fluke 87 series millimeters, for accurate measurement.

Recharge battery.

loads, but not large ones.

Possible Cause

Voltage drop across DC cables.

Suggested Remedy

Shorten cables or use heavier cables.

PROBLEM: Inverter will run some small

shutdown.

- Output short circuit protection.

2 Installation Guidelines

Selecting a Suitable Location

For safe and optimum performance, install the inverter in a location that is ...

- **Dry.** Do not expose to water drip or spray.
- **Cool.** Operate only in ambient temperatures between 32°F (0°C) and 104°F (40°C). Keep away from furnace heating vents or other heat producing equipment.
- **Well ventilated.** Allow at least 2 inches (5cm) clearance above and on all sides of the unit for proper cooling.
- **Safe.** Do not install inverter in a compartment with batteries or flammable

liquids, such as gasoline, or explosive vapors.

- **Clean and free of dust and dirt.** This is especially important if the Jazz inverter is used in a work environment.

- 10 -

4 Troubleshooting

PROBLEM: AC product will not operate,

no inverter lights are ON.

susceptibility to interference.

Possible Cause

Suggested Remedy

Battery is defective.
Inverter has been connected with reverse DC input polarity.

Check battery and replace if required.
Check connection to battery.
Probable inverter damage has occurred. Have unit repaired (not covered by warranty)
Check cables and connections. Tighten as required

Loose cable connections.

- 27 -

- Try a different TV. Different models of televisions vary considerably in their

Using the DC Cable-Pl - 26 -

Due to limitations in the common 12V/24V/48V DC

outlet in a vehicle or boat, the inverter should only be used to supply AC power to products that require the rated continuous power or less. If your application requires more than the rated continuous power (but less than the rated continuous power) or has a high start-up surge, see **Using the DC Cable-Clips**.

1. Attach the ring type connector marked with red to the positive (+) DC terminal on the inverter and attach the ring connector marked with black to the negative (-) DC terminal.

- 11 -



CAUTION! A reverse polarity connection (positive to negative) may damage the inv-

erter. Damage caused by a reverse polarity connection is not covered under warranty.

2. Tighten the nut on each DC terminal by hand until it is snug. Do not over tighten.
3. Insert the plug of this cable into the 12V/24V/48V DC outlet and switch the unit ON. See Section 4 if the inverter does not operate properly after being connected.
4. When the inverter is not in use, unplug it from the 12V/24V/48V DC outlet to prevent slight discharge of the battery.

Television Interference - 12 -

The inverter is shielded to minimize its interference

with TV signals. However, with weak TV signals interference may be visible in the form of lines scrolling across the screen. The following should minimize or eliminate the problem:

- Use an extension cord to increase the distance between the inverter and the TV, antenna and cables.
- Adjust the orientation of the inverter, television, antenna and cables.
- Maximize TV signal strength by using a better antenna and use shielded antenna cable where possible.

Interference with Electronic Equipment


Generally, most AC products operate with the

inverter just as they would with household AC power. Below is information concerning two possible exceptions.


Buzzing Sound in Audio Systems and Radios

Some inexpensive stereo systems, “boom boxes”, and AM-FM radios have inadequate internal power supply filtering and “buzz” slightly when powered by the inverter. Generally, the only solution is an audio product with a higher quality filter.

Instruction of Structure

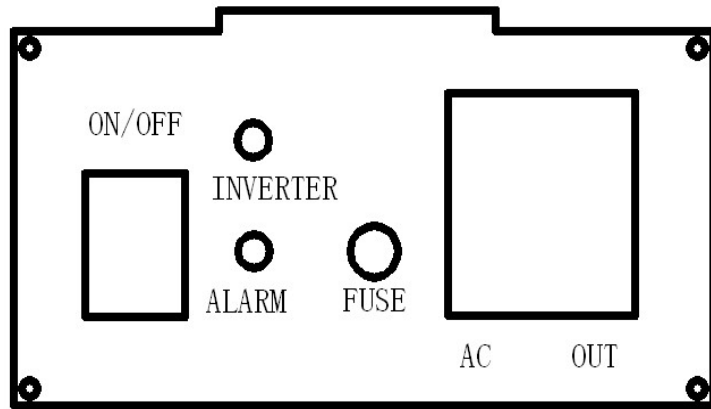

Instruction of operation

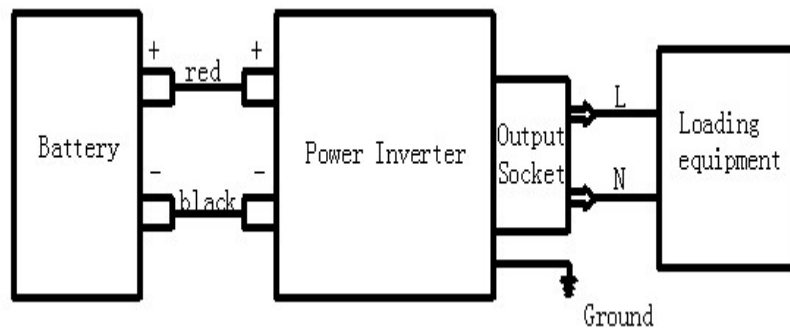

Using the DC Cable-Plugs

By directly connecting the inverter to a

12V/24V/48V DC battery with **DC Cable-Clips**, you can operate products with power requirements up to rated continuous output power. If you want to permanently connect the inverter to a battery, contact the customer service.

1. Follow steps 1 and 2 above (**Using the DC Cable-Plug**) to attach the ring type connectors.
2. Attach the black negative clip to negative (-) battery terminal.

Attach the red positive clip to the positive (+) battery terminal. Make sure both clips are securely connected to the battery terminals, as a

engine is running, but the voltage drop that occurs during starting may trigger the inverter's low

voltage shut down feature.

Because the inverter draws less than the no load current draw with the ON/OFF switch in ON position and with no AC products connected, it has minimal impact on battery operating times.

the temperature is between -23°C and 40°C .

9. In the event of an overload, low battery voltage or

overheating, the inverter will automatically shut down (See Section 4).

Battery Operating Time

Operating time will vary depending on the charge level of the battery, its capacity and the power level drawn by the particular AC load.


When using a battery as a power source, it is strongly recommended to start the vehicle every hour or two to recharge the battery before its capacity drops too low. The inverter can operate while the


3. loose connection will cause excessive voltage drop and may cause the cables to overheat

resulting in equipment damage or fire.

4. Switch the inverter ON. See section 4 if the inverter does not operate properly after being connected.
5. When the inverter is not in use, disconnect the **DC Cable-Clips** from the battery.

3 Using the inverter

The inverter is capable of continuously powering most 110V/230V AC products that use the rated continuous output power or less. Its AC output waveform, called “modified sine wave /pure sine

Wave ” is designed ⁻¹⁵⁻ in conjunction as wave shape of utility power, or more beautiful than city electricity.

The power, or “wattage”, rating of AC products is the average power they use. When many AC products are first switched on, they initially consume more power than their power rating. TVs, monitors, and electric motors are examples of products that have high “surge” requirements at start up. Although the inverter can supply momentary surge power as high as surge power, occasionally some products rated less than the rated continuous output power may exceed its surge capabilities and trigger its safety overload shutdown feature. If this problem occurs when attempting to operate several AC

6. If the inverter exceeds ⁻¹⁶⁻ its safe operating temperature, due to insufficient ventilation or a

high temperature environment, it will automatically shut down. The red FAULT light will turn on and the audio warning will sound.

7. Should a defective battery charging system causes the battery voltage to rise to dangerously high levels, the inverter automatically shuts down.



CAUTION! Although the inverter incorporates protection against over-voltage, it may still be damaged if the input voltage exceeds 16 volts/32 volts/64 volts.

8. The cooling fan is designed to operate only when



IMPORTANT: ^{- 21 -} vehicle batteries are designed to provide brief periods of very

high current needed for engine starting. They are not intended for constant deep discharge. Regularly operating the inverter shortens the life of the battery. Consider connecting the inverter to a separate deep discharge type battery if you will be frequently running electrical products for extended periods of time.

5. If an AC product rated higher than the rated continuous power (or which draws excessive surge power) is connected, the inverter will shut down. The red FAULT light will turn on.

products at the same time ^{- 20 -} first switching on inverter with all AC products switched off, then one

by one switch each on, starting with the high surge product first.

Indicators and Controls (see Figure 1)

- The AC outlets are provided on one end of the inverter. Any combination of 110V/230V AC products with a total continuous power consumption of the continuous power or less may be plugged in.
- The ON/OFF switch enables output AC power at the AC outlets when switched ON.
- The green POWER light indicates AC power is present at the AC outlets and the inverter is operating normally.

- The red FAULT light indicates inverter shutdown caused by low or high voltage, overload or excessive temperature.

Inverter operation

1. When properly connected to a 12V/24V/48V DC outlet or battery, turning the ON/OFF switch ON, will illuminate the green POWER light, and AC power to the outlets.
2. Plug the AC product(s) you wish to operate into the AC outlet(s) and switch them on, one at a time.
3. As the battery charge is used up, battery voltage begins to fall. When the inverter senses that the

voltage at its DC input has dropped to 10~10.5V/20~21V/40~42V, an audible alarm sounds. This allows time for computers or other sensitive devices to be shut down.

4. If the audible alarm is ignored the inverter will automatically shut down when the battery voltage drops to 9.8~10.2V/19.6~20.4V/39.2~40.8V. This prevents battery damage from excessive discharge. After auto shut down, the red FAULT light illuminates.